



Powering Business Worldwide

BACKED BY
Roadranger
SUPPORT

Subject: UltraShift *PLUS* Operation with Paving Machine

Document Number: TAIB0845

Date: February 4, 2013

Updated:

Issue Description:

Fleets request additional driver information for paving machine operation with the UltraShift *PLUS* Transmission.

Containment/Corrective Action:

The following information will be added to the UltraShift *PLUS* Driver Instructions, *TRDR1110*.

1. Back the vehicle to the paver.
2. Move the shift lever to neutral.
3. An "N" should appear in the gear display.
4. Allow the paver to move the truck forward.
5. When driver is ready to pull away from the paving machine, the driver can select "D" with the shift lever (if the vehicle is being pushed at or above 1 mph). The engine will synchronize and put the UltraShift *PLUS* into the appropriate gear, allowing the vehicle to pull away from the paver.

Affected Models/Population:

All UltraShift *PLUS* Transmissions

Field Strategy:

Share this information with drivers until the UltraShift *PLUS* Driver Instructions, *TRDR1110*, content is updated.

The material contained in this bulletin is product improvement information. Eaton Corporation is not committed to, or liable for, canvassing existing products. FSUD: 2013-FSUD-1965